Bel-Aire
ElectronicAirCleaners.com

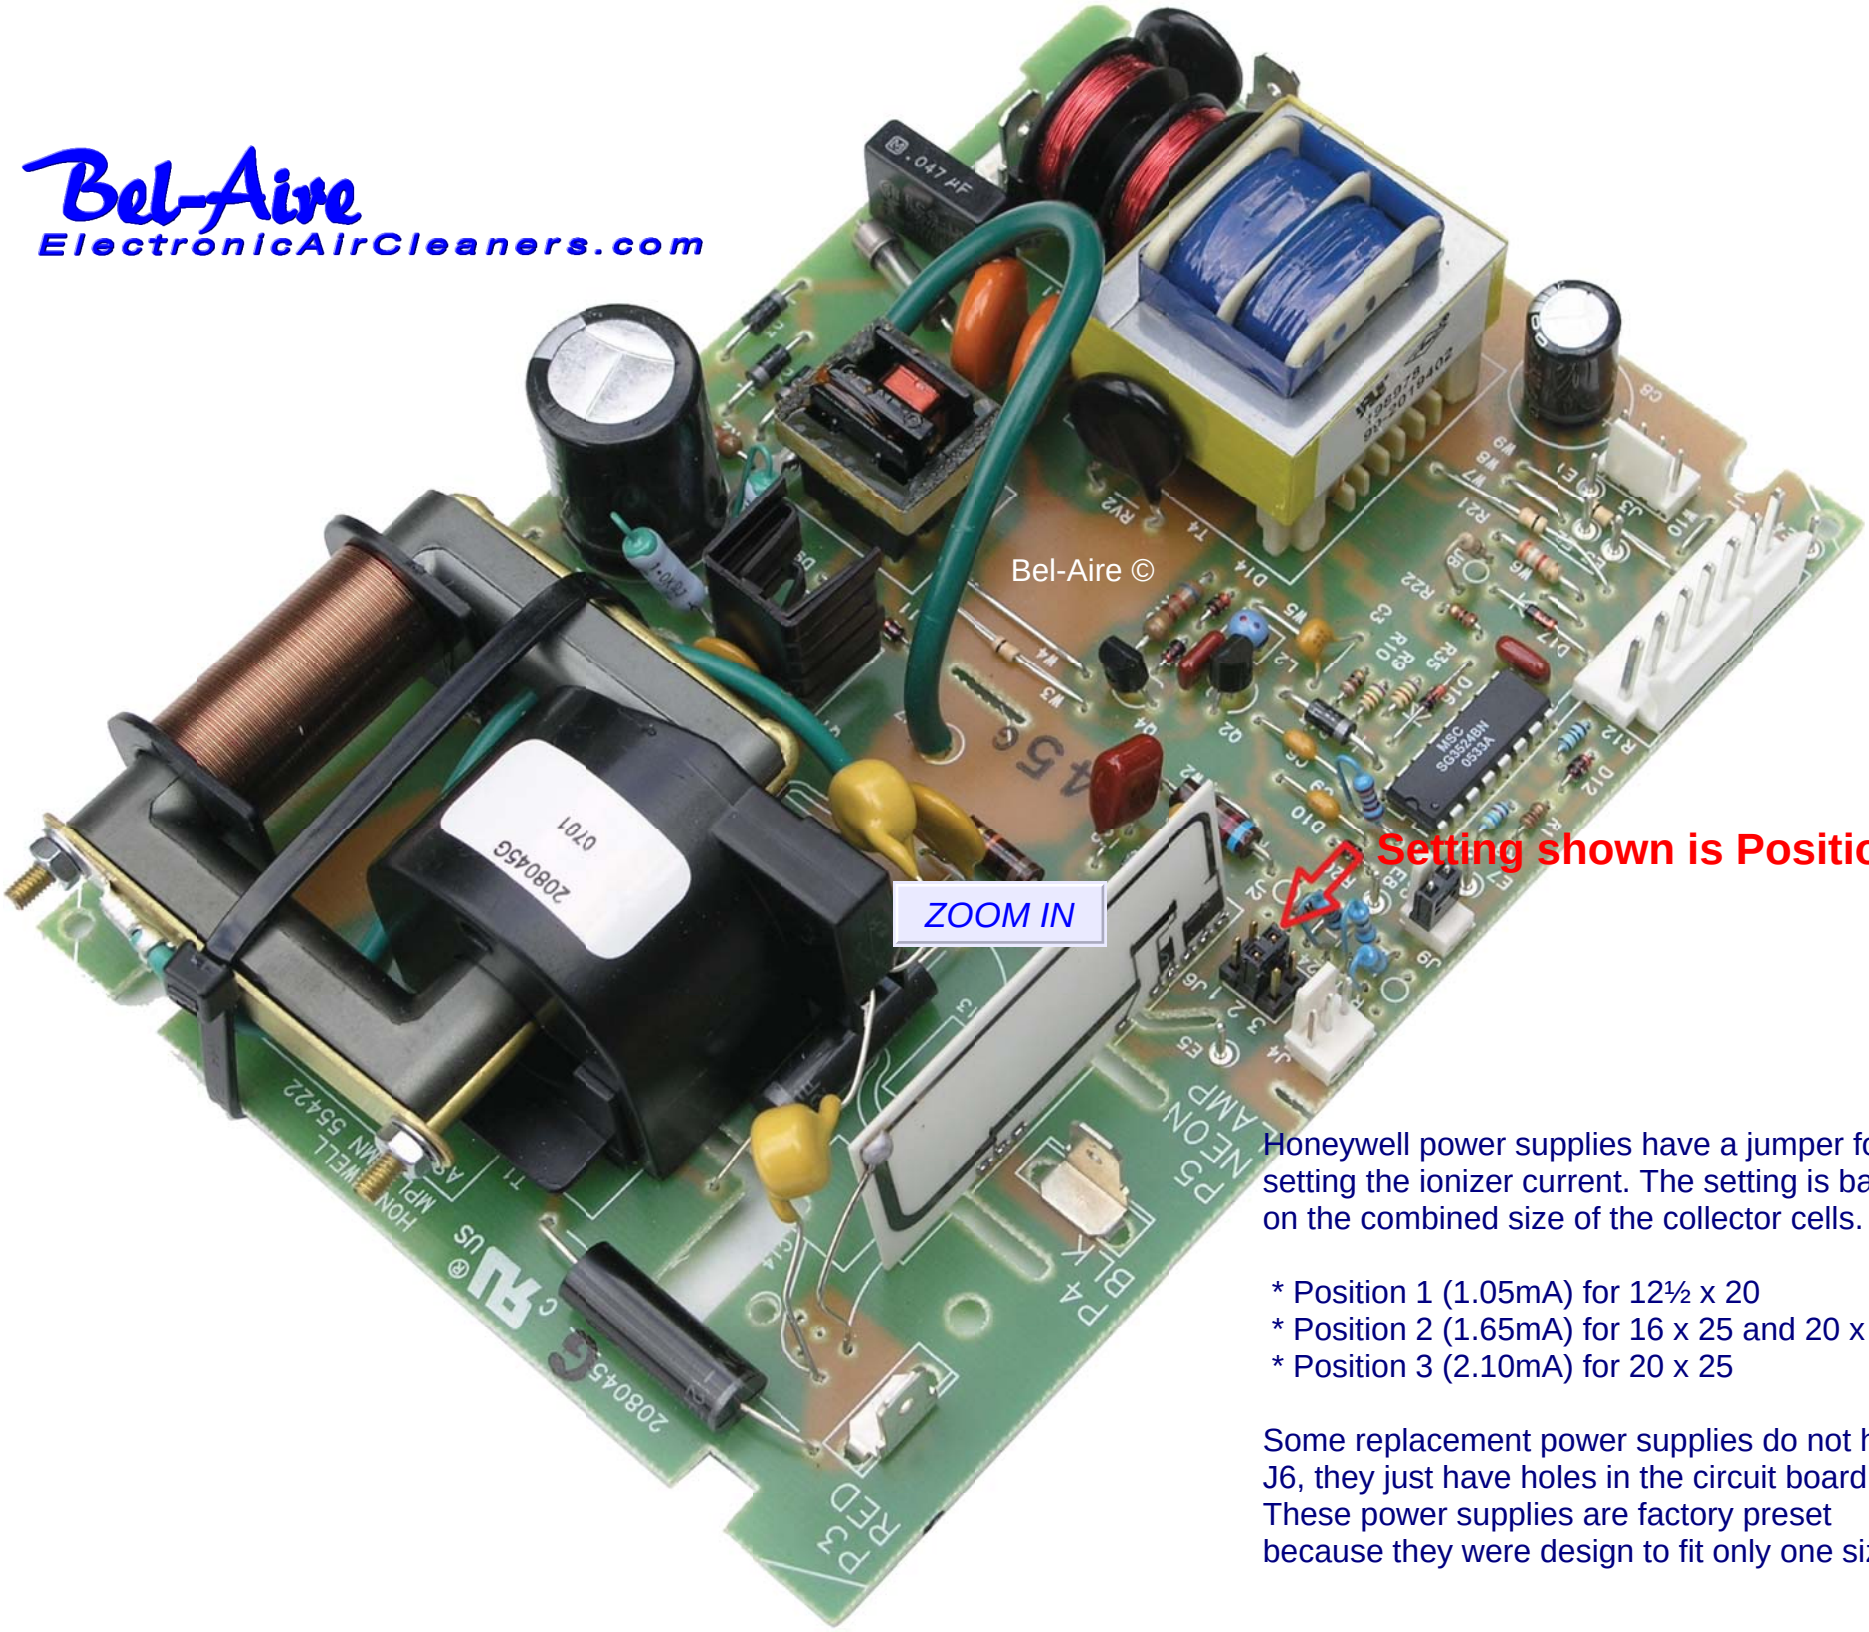

Honeywell power supplies have a jumper for setting the ionizer current. The setting is based on the combined size of the collector cells.

* Position 1 (1.05mA) for 12½ x 20
* Position 2 (1.65mA) for 16 x 25 and 20 x 20
* Position 3 (2.10mA) for 20 x 25

Some replacement power supplies do not have J6, they just have holes in the circuit board. These power supplies are factory preset because they were design to fit only one size.